


! **AVOID** use of sunshade when driving vision is impaired

Part List

Sunshades



Front door sunshade x2



Rear door sunshade x2




3rd row seat sunshade (MPV/SUV models only) x2

Clips


(CK-41)

Clips




x10

Cleaning Set

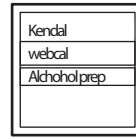

Alcohol Pad

x1set



Primer




Apply primer **ONLY** if surface has been treated or polished




Nylon Bag x1


Recommended Clip Installation Positions

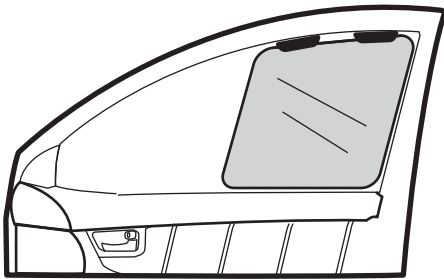

Front Door

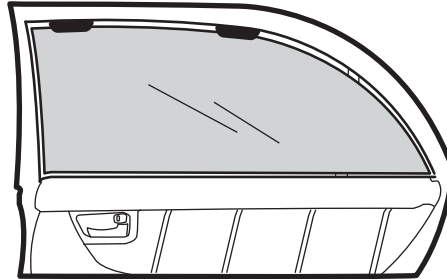

Rear Door

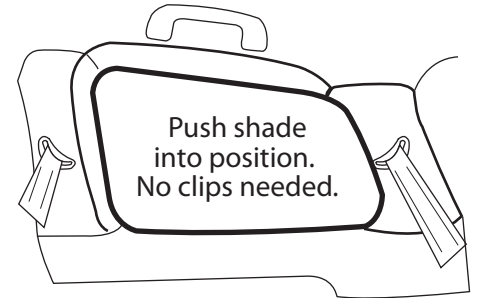


Push shade into position. No clips needed.

3rd row seat (MPV/SUV models only)


Installation Guide


1 Wind down window halfway. Clean installation points with alcohol pad. Wait - 30 seconds.

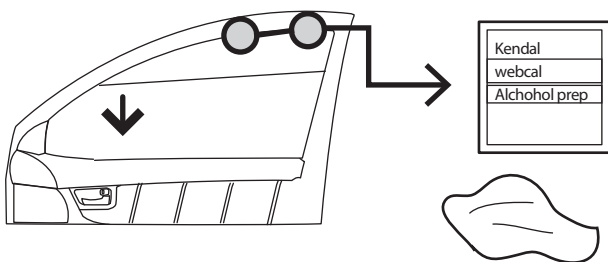

! Apply primer **ONLY** if surface has been treated or polished.

2 Apply primer at installation points. Wait - 30 seconds. The purpose is to increase adhesive efficiency between surface and tape.

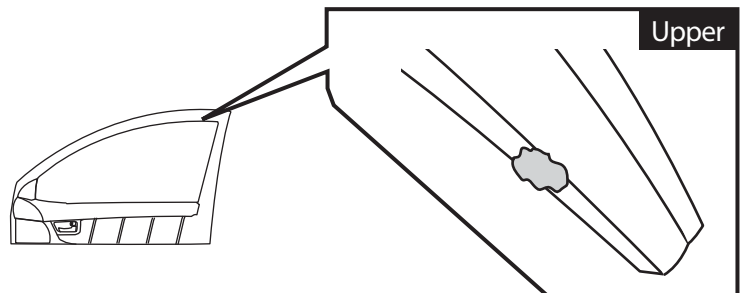


 **AVOID** use of sunshade when driving vision is impaired

Installation Guide

3 Attached all clips


Upper

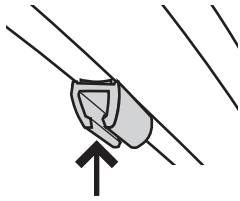


4 Repeat process no.1- 3 for all doors

Sunshade Installation Guide

Front & Rear Door

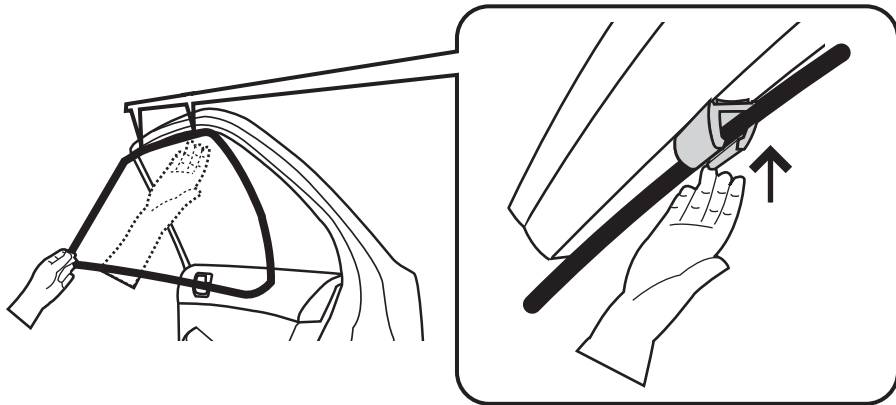


1 Insert top section of the sunshade into clips

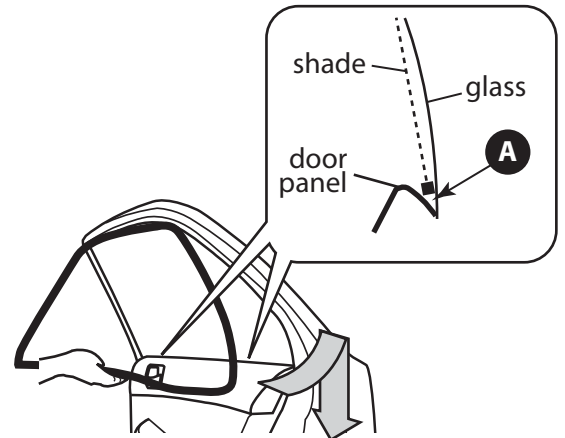


2 Insert bottom section of the sunshade into bottom side of door panel **A**

3rd row window (some model only)

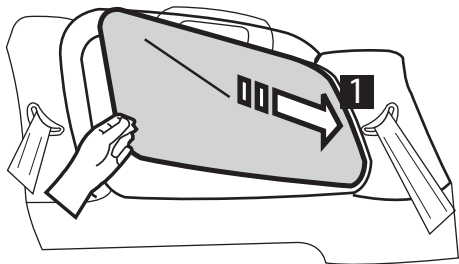


Insert rear corner of shade into panel **1**

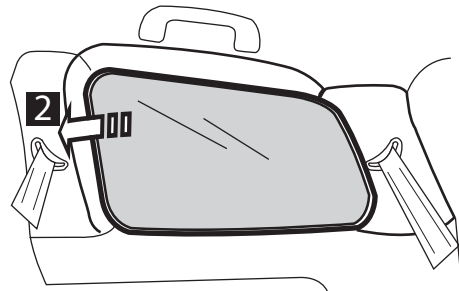


Insert front corner of shade into panel **2**

Collapse


Step 1

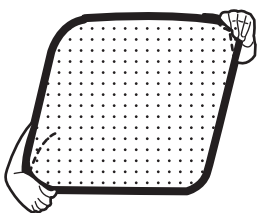


Step 2

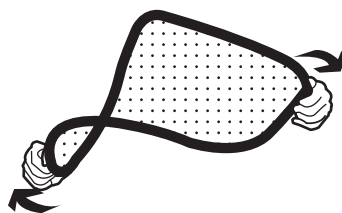

Step 3

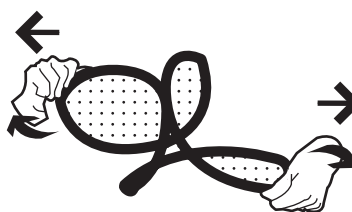

Step 4

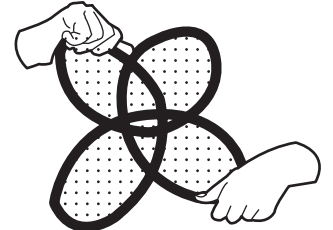

Remark :-

- Apply primer only if surface has been treated or polished.
- Adhesive tape have the highest efficiency for one time use only.
- Adhesive efficiency will be increased 90 % within 24 hours and will be the highest efficiency within 72 hours.
- Normally, spring frame may be distorted slightly.
- Please avoid use of sunshade when driving vision is impaired.