



SUNROOF SHADE INSTALLATION GUIDE

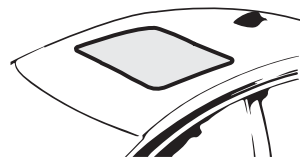

(S-EM_M-A)

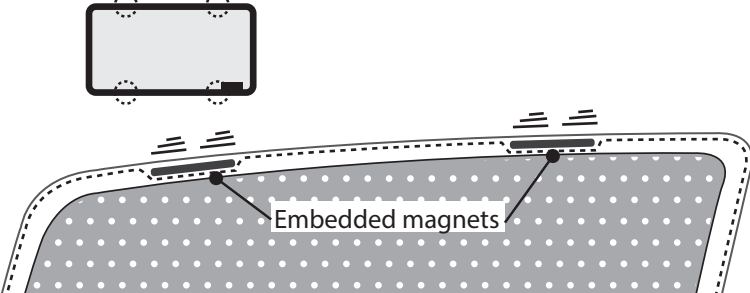


***The above diagram is for illustration only.
Shape of shades and magnet positions will differ from model to model.**

"Groovy Snap-On 4.0 will feature magnets embedded into the frames of the sunshades. There are no Snap-On magnet clips required for this vehicle model."


Installation Guide

1 Position the front side of the shade to the front steel section of the sunroof. The embedded magnet will latch itself to the steel section of the sunroof.

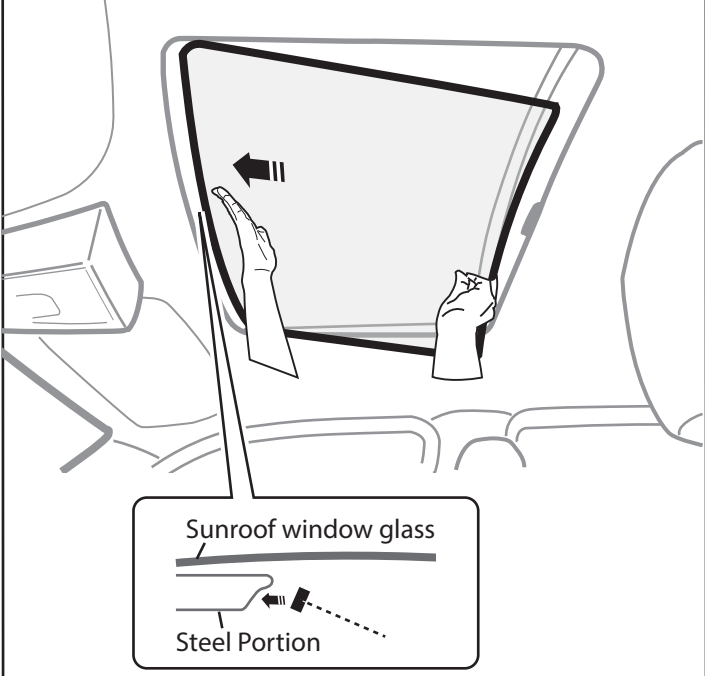

Sunroof window glass
Steel Portion

2 Do the same as step 1 for the rear section of the shade. The remaining side and rear embedded magnet will latch on to the steel frame.

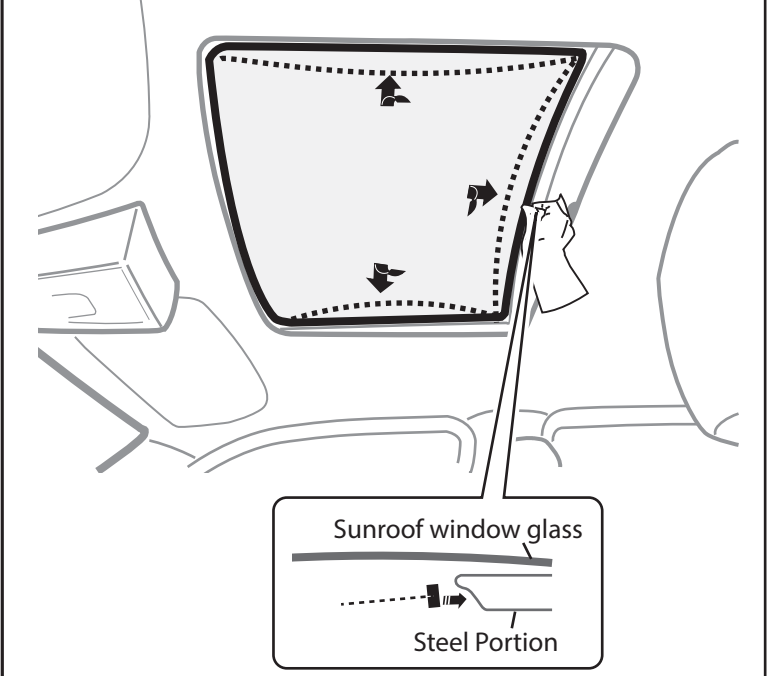

Sunroof window glass
Steel Portion

3 Repeat Step 1-2 for the another sun roof (if any)