SUNROOF SHADE INSTALLATION GUIDE







S-4SFL-A



AVOID use of sunshade when driving vision is impaired




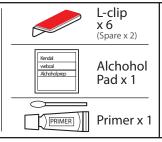

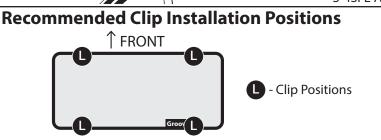


Installation Guide


The position of the magnets can be felt by running your finger over the top side of the sunshade's frame. You will feel an indentation on the frame and that is the position of the magnet.

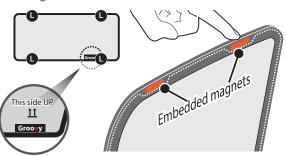


Apply primer ONLY if surface has been treated or polished Place the L-Clips at the magnet locations of the sunshade. Note: Do not remove protective layer on adhesive tape Embedded magnets

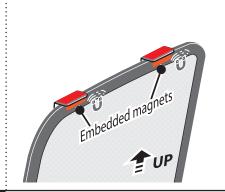


Place sunshade with the L-clips attached to the panel of the sunroof to find the position for the sunshade and L-clips.

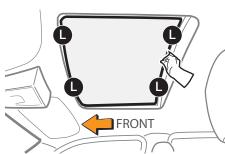


Do not remove protective layer on adhesive tape **Excluded** Adhesive tape





Clean installation points with alcohold pad. Wait - 30 seconds.

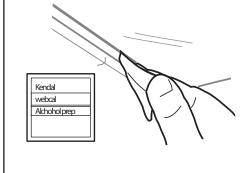

Apply primer at installation points. Wait - 30 secs. The purpose is to increase adhesive efficiency between surface and tape.

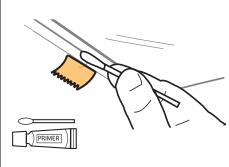

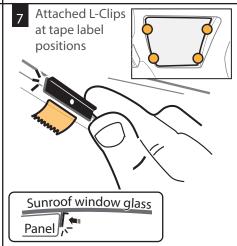

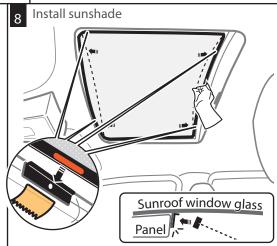



AVOID use of sunshade when driving vision is impaired



We at Groovy Shades value creativity and will pursue all legal avenues at our disposal to protect our product worldwide. ■ Patent - Taiwan, China, Japan, USA & Germany, South Korea, Thailand, Malaysia and India