Groovy® | SHADE INSTALLATION GUIDE

ENGLISH

(S-6R-A-L)

⚠ Remove sunroof/panoramic sunshade(s) first before retracting the vehicle's sunroof/panoramic roof

Parts List

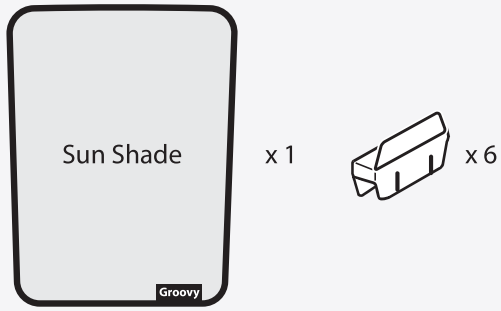

Recommended Clip Installation Positions

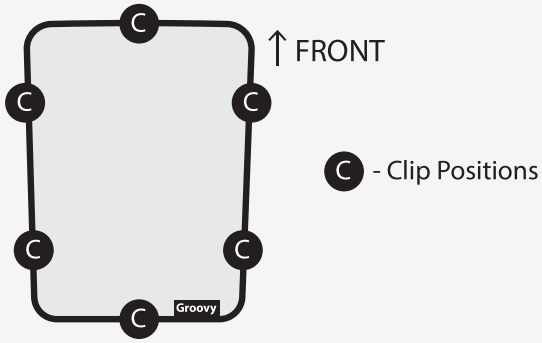

Installation Guide

1a Place clip to the side of the steel frame.

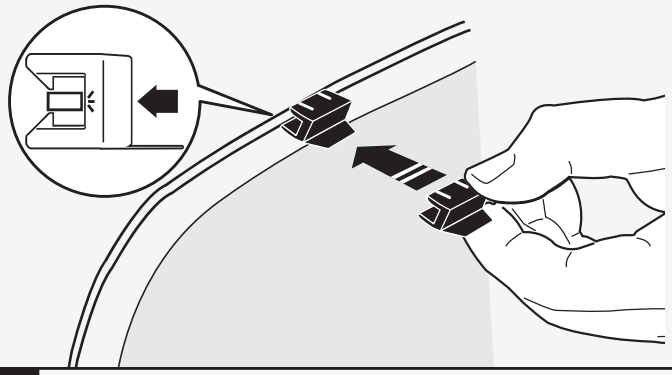

1b Push clip upwards to fasten clip onto steel frame.

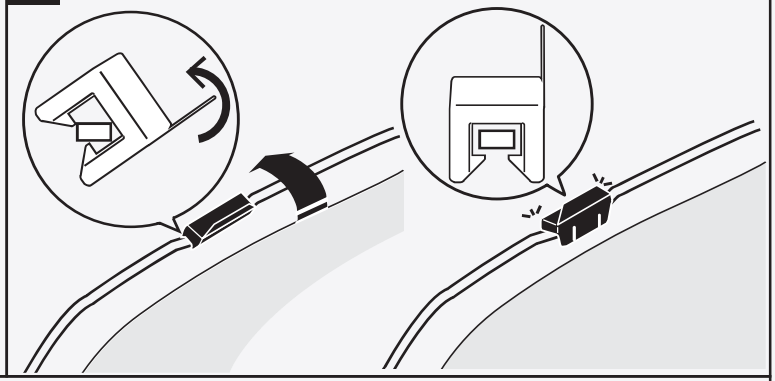

2 With the top clip locked into place, push the front section of the shade into the trim panel.
It is important to make sure that the Groovy Label is at the rear end of the shade.
The flat tip of the clip will sit in between the trim panel and sunroof glass.

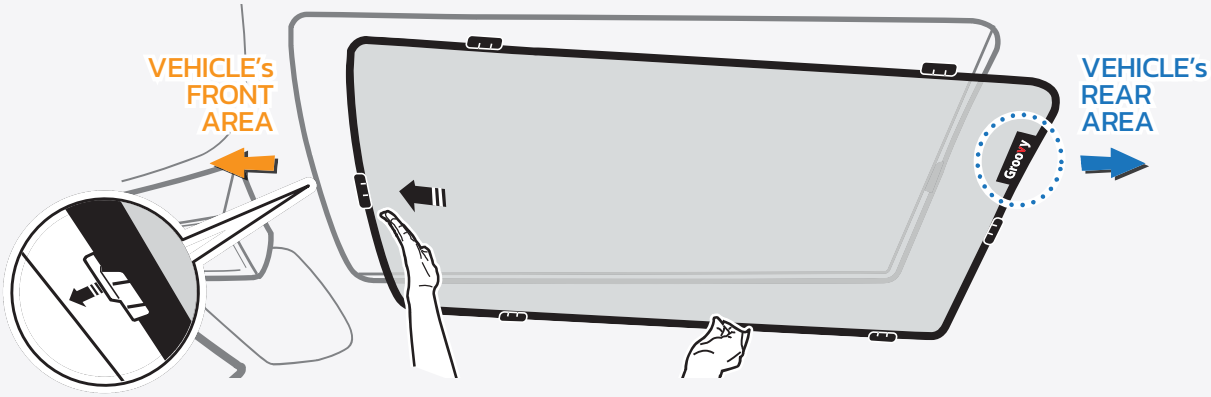

3 Repeat step 2 for the sides and rear section of the shade.

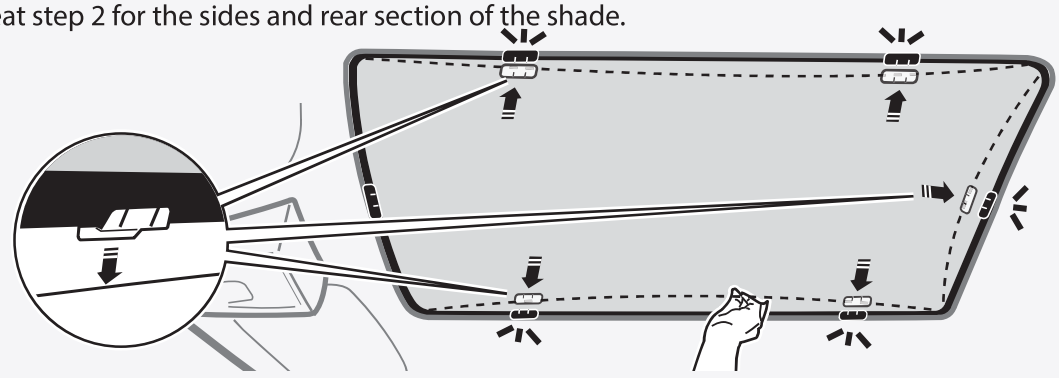

The sunroof shade is foldable

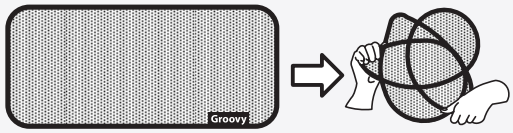

⚠ **Warning :** The high tension from the collapsed steel frame may cause injury. Please be cautious when unfolding the collapsed shade.